

**IMPORTANT NOTES:**

- Low impedance fuel injectors, external resistors are needed
- Only 5v logic level coils or modules are supported
- Connecting a dumb coil directly will cause damage to the ECU.
- Fuse values are approximate, and should be calculated based on the load of connected devices.

**PERCELERIS SATUS WIRING DIAGRAM  
4 CYL SEQUENTIAL COP  
FIRING ORDER 1-3-4-2**

For sequential operation, a compatible camshaft signal is needed in addition to the crankshaft signal. If there's no camshaft signal in sequential mode, the ECU will be out of sync.

