

IMPORTANT NOTES:

- Low impedance fuel injectors, external resistors are needed
- Only 5v logic level coils or modules are supported. Connecting a dumb coil directly will cause damage to the ECU.
- Fuse values are approximate, and should be calculated based on the load of connected devices.

PERCELERIS SATUS WIRING DIAGRAM
4 CYL WASTED SPARK /SEMI-SEQ COIL ON PLUG
FIRING ORDER: 1-3-4-2

