

IMPORTANT NOTES:

- Low impedance fuel injectors, external resistors are needed
- Only 5v logic level coils or modules are supported
- Connecting a dumb coil directly will cause damage to the ECU.
- Fuse values are approximate, and should be calculated based on the load of connected devices.

PERCELERIS SATUS WIRING DIAGRAM
5 CYL SEQUENTIAL COP
FIRING ORDER: 1-2-4-5-3

For sequential operation, a camshaft/crankshaft signal is needed in addition to the crankshaft signal. If there's no camshaft signal in sequential mode, the ECU will be out of sync.

